



Order the correct sized Column Sentry column protector according to the size of your industrial column. See our column protector size chart for details to assist you in making your selection. The protector is delivered with two sides and the attaching hook 'n' loop strap.



First, place the product around the column and extend the straps around the installed protector. Finally, press the hook and loop straps together for a tight fit.



That's it! The installation process for the protector is that simple!