


Installation Instructions



Step 1 – Measure the circumference of the object that you wish to wrap.

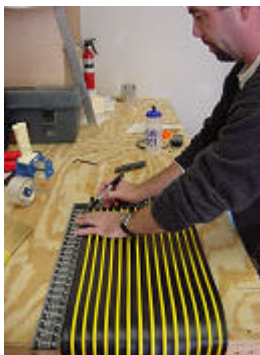

Step 2 – Measure length of Bumperwrap™ to match the circumference of the object, and cut to the determined length. A sharp utility knife or heavy-duty scissors will work well for cutting Bumperwrap™. For best results, use a metal framing square or similar tool to ensure a square cut. Check the length by wrapping the cut piece tight around the object, leaving ½" gap for the fasteners. When wrapping the same size object in several applications, complete first installation to check for a good fit.



Step 3 – Feed the fasteners through Bumperwrap™. Four straps or cable ties are recommended for most applications. On small poles, more fasteners may be required. For installations of 48" or less, use heavy-duty cable ties available from your distributor. For longer installations use ½" pallet banding (plastic strap and buckles are also available from your distributor)

(Silicone spray can be used to aid in sliding the attachment banding into Bumperwrap™)



Step 4 – Apply the material at the optimum height for vehicle protection and visibility. Multiple layers of 12" Bumperwrap™ can be applied to achieve 24" or more of protection.