




## BumperWrap Instruction Addendum



1. Due to the diameter and size of your columns, you will need to use a fishing tape to push the strapping through the slots in the BumperWrap.
2. Below are some pictures of how the strapping buckles are used:

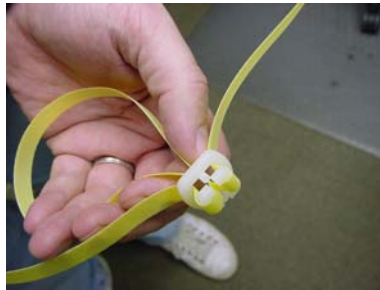

5718 Transportation Blvd  
Garfield Heights, OH 44125  
phone 800-516-9287 fax 440-543-8661  
INNOPLAST.com